

# Quick Start Guide

Cohn Hall 33 & Knott Hall 007, 009

Wireless Classroom Remote

## LIGHT:


If the remote is working, this light should light up each time you press a button. If this light does not come on when a button is pressed, then the batteries are dead—call Technology Services @ x2255.

## FUNCTIONS:

All of these options mimic those on the face of the VCR; to use them, be sure "VHS" is selected as the source. The "CHANNEL" options can be used to select TV channels, as long as "VHS" is the source.

## VOLUME:

Use the up and down arrows to increase or decrease the volume. "MUTE" will toggle the room's speaker system on and off.

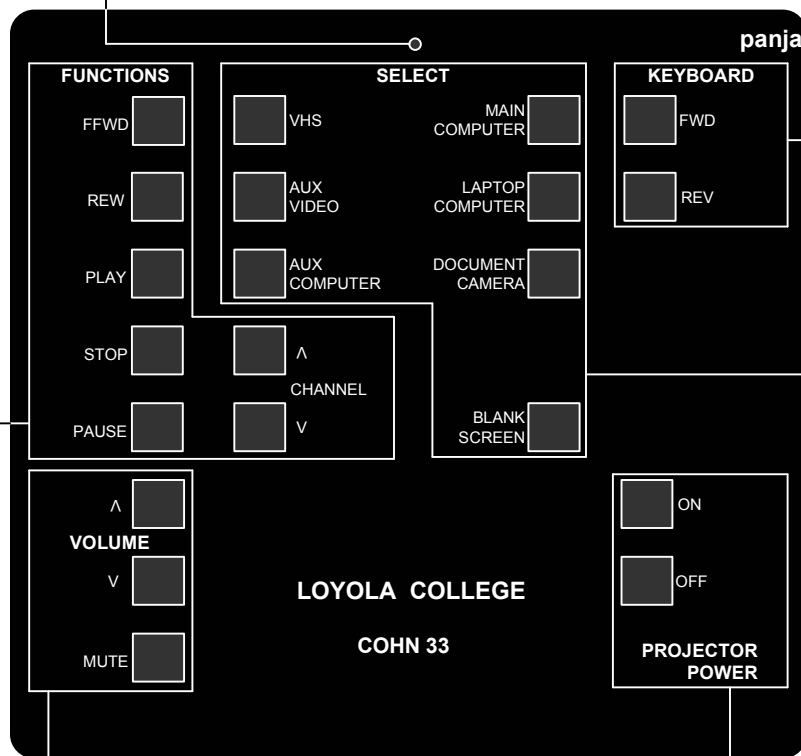

## KEYBOARD:

During a PowerPoint presentation, the "FWD" option can be used to advance the presentation by one slide and "REV" will reverse the presentation one slide. The computer with the PowerPoint presentation must be selected as the source for this function to be applicable.

## SELECT:

These are the source options for the projector. "VHS" will select the VCR; "AUX VIDEO" will select any device connected to the shelf via the S-Video port; "AUX COMPUTER" will select any computer connected via the 15-pin monitor port; "MAIN COMPUTER" selects the computer in the podium; "LAPTOP COMPUTER" selects the laptop connected via the laptop cable on the top of the podium; "DOCUMENT CAMERA" will select the document camera as the source; "BLANK SCREEN" will cause the projector to display a blank image on the screen. This is ideal when switching between PowerPoint presentations.

## PROJECTOR POWER:

"ON" and "OFF" will turn the projector on and off. The screen must be manually lowered.